

АУДИОКОММУТАТОР UPZ



Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Россия (495)268-04-70

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Казахстан (772)734-952-31

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

R&S®UPZ Audio Switcher At a glance

The R&S®UPZ audio switcher is a multichannel switcher for audio channel inputs and outputs. Used with Rohde & Schwarz audio analyzers, it opens up further application fields.

As an add-on unit to the R&S®UPV and R&S®UPP audio analyzers, the R&S®UPZ audio switcher can be used whenever input or output signals need to be switched over to multiple channels or DUTs. Users can directly operate the switcher from the graphical user interface of the audio analyzer. Control via PC is also possible.

Key facts

- Available as input and output switcher
- Cascading of up to 128 channels
- Operation directly from the R&S®UPV or R&S®UPP audio analyzers
- Control via RS-232-C or USB 2.0 for handling universal applications

Rear view of the R&S®UPZ.



Several R&S®UPZ audio switchers can be cascaded.



Benefits and key features

Wide variety of applications for all kinds of audio measurements

Surround applications in homes, multichannel mixing consoles in sound studio environments, multichannel amplifiers as well as the adaptation of several DUTs in production are just some examples of the wide variety of applications that are possible using the R&S®UPZ audio switcher. As an add-on unit to the R&S®UPV and R&S®UPP audio analyzers, the R&S®UPZ is directly operated from the graphical user interface. Remote control, e.g. in production environments, also runs via the audio analyzer.

Users can also control the R&S®UPZ audio switcher directly from a PC via its RS-232-C or USB 2.0 interfaces.

Available as input and output switcher

The R&S®UPZ audio switcher – like the R&S®UPV and R&S®UPP audio analyzers – comes with XLR connectors. Since there is a difference between male and female connectors in the XLR system, the R&S®UPZ is available both as an input and as an output model.

Both models feature two switching channels, enabling users to simultaneously operate the two generator or measurement channels of the audio analyzer.

Up to 16 input switchers plus 16 output switchers can be cascaded, allowing up to 128 input or output channels to be switched.


Applications for testing multichannel amplifiers

The standard application is paired or individual switching of the DUTs or measurement channels to be tested. In each case, one signal path is connected to an assigned channel.

A special feature is measuring the crosstalk of the individual channels of multichannel amplifiers, which requires a particularly critical measurement.

For this application, the signal coupled into a channel will be measured while all other amplifier channels are driven at the same time. The output switcher enables users to switch signal path B through to all channels in parallel, while signal path A can be switched to any selectable channel.

Switch paths with the R&S®UPZ switcher

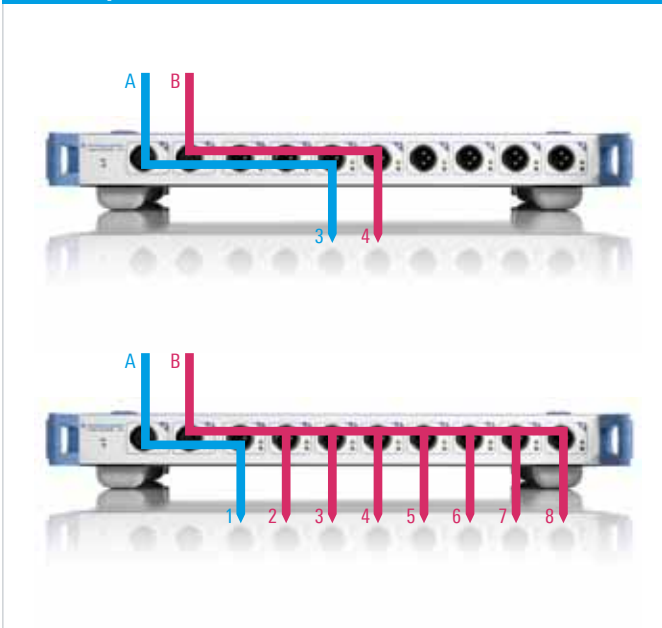

The R&S®UPZ together with the R&S®UPV.



Specifications

Electrical data		
Nominal switching capacity ¹⁾	resistive load	33 V (46.7 V V _p), 0.5 A
Max. switching power	resistive load	60 W
Max. switching current		2 A
Crosstalk (balanced 600 Ω load) ²⁾	20 kHz	typ. -140 dB
	100 kHz	typ. -126 dB
Series resistance	per signal pin	typ. < 0.3 Ω
Shunt capacitance	each signal pin to ground	typ. < 90 pF

General data		
Environmental conditions		
Temperature	operating temperature range	0°C to +50°C
	storage temperature range	-40°C to +70°C
Humidity		95% relative humidity at 40°C, constant, in line with EN 60068-2-78
Power supply		
	nominal voltage	100 V to 120 V AC ± 10% 220 V to 240 V AC ± 10%
	nominal frequency range	50 Hz to 60 Hz ± 5%
Power consumption		
	input switcher	max. 10 VA
	output switcher	max. 15 VA
Product conformity		
Electromagnetic compatibility	in line with EMC Directive 2004/108/EC	applied harmonized standards: EN 61326-1 (for industrial use) EN 61326-2-1 EN 55011 (Class B) EN 61000-3-2 EN 61000-3-3
Electrical safety	in line with Low Voltage Directive 2006/95/EC	applied harmonized standard: EN 61010-1
	USA	UL 61010-1
	Canada	CAN/CSA-C22.2 No. 61010-1
International certification	VDE – Association for Electrical, Electronic and Information Technologies	GS mark 138469
	CSA – Canadian Standards Association	CSA _{US} mark 1245063
Dimensions	W × H × D	427 mm × 43 mm × 350 mm, 1 HU (16.81 in × 1.69 in × 13.78 in)
Weight		3.7 kg
Remote Control		via RS-232-C or USB 2.0

¹⁾ For max. relay life: max. 5 W or 0.2 A.

²⁾ Between any two channels into 600 Ω.

Ordering information

Designation	Type	Order No.
Base unit		
Audio Switcher (input, female)	R&S®UPZ	1120.8004.12
Audio Switcher (output, male)	R&S®UPZ	1120.8004.13
Accessories supplied		
Power cable		
Operating and service manual		
RS-232-C extension cable		
USB cable		
Recommended extras		
19" Rack Adapter	R&S®ZZA-111	1096.3254.00

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижегород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06				
	Киргизия (996)312-96-26-47	Россия (495)268-04-70	Казахстан (772)734-952-31	